



SECUREGUARD

SECUREGUARD USER MANUAL

FACTORY CODES

Reset & Master Code: ##12345678#

User code (1-4 digital): 1234

User code (1-8 digital): 12345678

UNLOCKING THE DOOR

Begin by entering the <master code> OR <user code> followed by '#'. If the correct code is entered, the LED light will become illuminated followed by two audible beeps. The door must now be opened within 5 seconds. The door will automatically lock if no action is taken within the given timeframe. For additional security, the keypad will automatically lock for 1 minute if the incorrect code is entered four consecutive times.



CHANGING THE MASTER CODE

To change the master code, first enter the current <master code> followed by '#'. The green LED will illuminate. Now press '*' and observe the yellow LED illuminate. The keypad has now entered the master setup mode. Enter <new master code> and press '*' again within 8 seconds. The change will be confirmed by three audible beeps. Four consecutive audible beeps indicates the change has been unsuccessful. By default, when the master code is changed, the user code will automatically revert back to the default user code.

CHANGING THE USER CODE

To change the user code, first enter the current <user code> followed by '#'. The green LED will illuminate. Now press '*' and observe the yellow LED illuminate. The keypad has now entered the user setup mode. Enter <new user code> and press '*' again within 8 seconds. The change will be confirmed by three audible beeps. Four consecutive audible beeps indicates the change has been unsuccessful.



CONTINUED

CHANGING THE RESET CODE

Start by entering the <master code> then press '#' and wait for the green LED lights to illuminate. Now press '# #' and observe the yellow LED light illuminate. At this stage you have eight seconds to enter a new reset code followed by '*' to confirm the new selection. After selecting '*', you will hear three audible beeps that will confirm the new reset code has been accepted. Four consecutive audible beeps indicates the code has not been accepted.

TO RESET THE LOCK

Resetting the lock will reset the <master code> and <user code> to the default factory codes as above. To start, enter '# #' followed by the <reset code>. Once done, open the door to your safe. Once open, the <master code> and <user code> will both automatically reset immediately.

LOW BATTERY WARNING

Upon entering any code to access the safe, a low battery warning may be shown. This is indicated by the illumination of both the red and green LEDs. It is essential that you change the batteries without delay.

TECHNICAL PARAMETERS

Working Environment

Working Temperature: -5°C ~ 50°C

Working Humidity: 25%RH - 85% RH

Performance & Power Supply

User time: More than +1,000 times

Power supply: 9x alkaline batteries (use alkaline batteries only)

For further technical information or to discuss a technical issue, please contact your local dealer.



PURCHASING DEALER

Serial Number:

Dealer Stamp:

Dealer Contact Information:



HUNTGUARD